



Manual

Fax: 0755-27808454

Shenzhen **Z**heng**Y**uanTai **T**echnology,Co,.Ltd.

1F,3F,5F,1st,Building,LeBao Industrial Park,FengXin Rd,Guangming New District,Shenzhen,China

Safty Instructions

To use the product safely and rightly and to keep users from suffering hurt or property loss, please observe the following safety precautions when installing, using and maintaining.

Please read this handbook before operating the product and keep the handbook for future reference.

- Notice and observe all the warnings and illustration.
- Do not adjust, maintain or modify if you don't have corresponding qualifications.
- Do not open or remove the rear cover, box or cover board of the product. Please contact the dealer or after-sales service center when needing internal checking, adjustment and maintaining.
- Do not place article on the product. The product might be damaged if foreign matters enter the internal unit.
- Do not tread or squeeze the power line, especially on the plug, outlet or the place where the cable extends out of the product.
- Do not put the product in inflammable or corrosive gaseous environment, which might cause fire or damage the product. Putting the product in inflammable gas is easy to cause dangerous explosion.
- Please cut off power or the connecting line immediately if there is smoking, off-odor or abnormal noise. Contact the after-sales service center to maintain after affirming there is no more smoking or off-flavor. It might cause fire if it is used without maintaining.
- Only qualified servicemen can maintain. If the product gets any kind of damage, such as damage to plug, splash or foreign matter into the facility, exposed to rain or humidity, not able to function or dropped from the high, please maintain it immediately.
- Do not expose the product to the rain or chemicals. If the product is moist, please dry it before turn on the power.
- Turn off the power when clean the product.
- Installment of unsuitable facility might cause the fall of the facility or other accidents. Fasten the screw of every component when installing.
- Do not touch the fixed component inside the facility, otherwise it might cause damage to people or to the facility.
- Be careful when maintaining inner body even if the power is cut off. Some facilities are equipped with UPS, and they can continue to supply power which is dangerous to people after the power is cut off.

Shenzhen **Z**heng**Y**uanTai **T**echnology,Co,.Ltd.

1F,3F,5F,1st,Building,LeBao Industrial Park,FengXin Rd,Guangming New District,Shenzhen,China

Notes

- Please put the facility in flat, stable and draughty place and avoid direct sunlight, high temperature, humidity, dust and corrosive gas.
- If the product is installed on the wall, please make sure the wall's load bearing is enough. To avoid falling and hurt people, install according to the illustration.
- The LCD might get nebulized when the temperature variation is big, which will cause image distortion or decay of color. Wait for a moment (with power on) and the nebulization will disappear.
- Do not block up the ventilation opening. Install the facility according to this handbook.
- Do not install the facility near any heat source such as radiator, heat register or stove.
- Do not use unqualified connecting lines, which might cause equipment failure.
- Do not press, stretch or heat the connecting line, which might cause damage to it.
- Please firmly grasp the plug of the connecting line when inserting and drawing. Pulling the connecting line emphatically might cause damage to it.
- Cut off power and the connecting line immediately and contact the after-sales service center if the facility or the connecting line is damaged for some reason. Continuing using without maintaining might cause smoking or off-flavor.
- Do not hang or shin on the facility, which might cause the facility to fall, upset or damaged and cause hurt to people. Be more careful when there are kids near the facility.
- Please cut off power for safety if not using the facility for a long time.
- Do not let the connecting line get squeezed by the wall or buckle, pull or twine the connecting line overly.
- Make sure the power and the connecting line are cut off when moving the facility.
- Keep the facility from getting collided, which might cause equipment failure.

Shenzhen **Z**heng**Y**uanTai **T**echnology,Co,.Ltd.

1F,3F,5F,1st,Building,LeBao Industrial Park,FengXin Rd,Guangming New District,Shenzhen,China

Contents of Package



Introduction to the product

Thank you for buying this 65"PCAP 4K monitor. We wish you to enjoy this product in the next few years. The power dissipation is low no matter in viewing mode or standby mode, which means you make contribution to energy saving. We are introducing the function of the product here and we hope it can enrich your usage experience.

Product appearance



Performance feature

High contrast ratio and high luminance(500cd/m²)

Shenzhen **Z**heng**Y**uanTai **T**echnology,Co,.Ltd. 1F,3F,5F,1st,Building,LeBao Industrial Park,FengXin Rd,Guangming New District,Shenzhen,China

- G+G Projective Capacitive Touch.
- 178° /178° view angle.
- 50K lifespan.Front toughed glass with AG function.
- Built-in power supply, low energy consumption, long service life.
- USB Touch Interface,3840x2160 resolution.
- Support PIP,Quad Display and display image rotation 90° /180° /270°
- Remote control

Connecting external device

Please connect the monitor to external devices according to the following I/O interface list, and choose corresponding signal incoming channel.




- 1. AC input.
- 2. Power swift on/off
- 3. DVI input
- 4. HDMI3 1.4
- 5. HDMI2 1.4
- 6. HDMI1 1.4

Shenzhen ZhengYuanTai Technology,Co,.Ltd.

1F,3F,5F,1st,Building,LeBao Industrial Park,FengXin Rd,Guangming New District,Shenzhen,China

- 7. HDMI 2.0
- 8. DP input
- 9. D-sub
- 10. DP output
- 11. RS232
- 12. RS232
- 13. USB for touch only

Monitor Remote Control

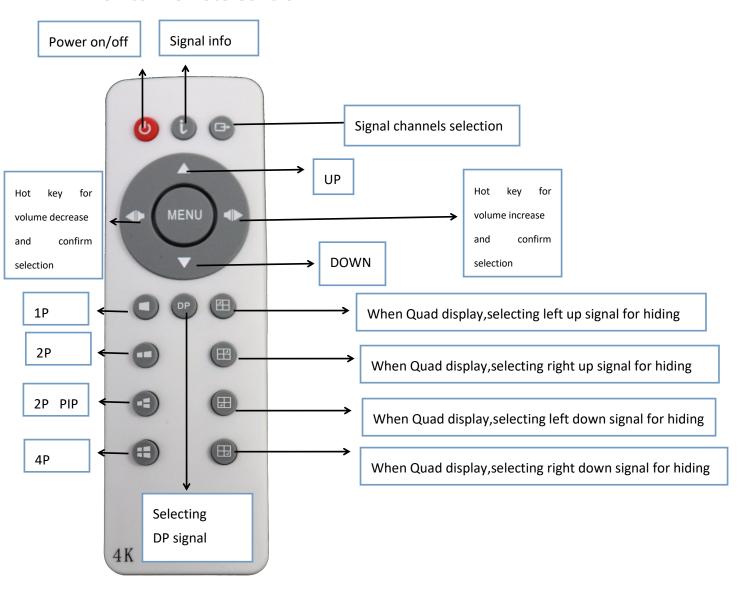


Shenzhen **Z**heng**Y**uanTai **T**echnology,Co,.Ltd.

1F,3F,5F,1st,Building,LeBao Industrial Park,FengXin Rd,Guangming New District,Shenzhen,China

Monitor OSD Controls


1) Signal Selection.

There are various signals for option. Press button to enter signal selection, then press Left/Right button to choose Display. **Menu button is back**

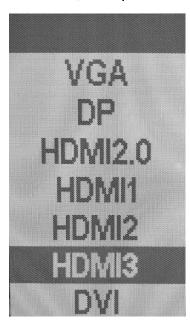

2) Signal info

It shows basic information of input signals. Menu button is back

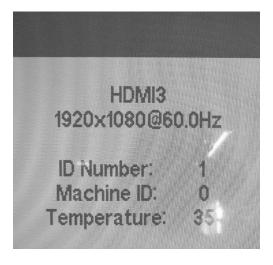

Shenzhen **Z**heng**Y**uanTai **T**echnology,Co,.Ltd. 1F,3F,5F,1st,Building,LeBao Industrial Park,FengXin Rd,Guangming New District,Shenzhen,China

3) Display

Display menu can sent Display Mode, Display Rotate, Freeze.

Display Mode includs 1P(1 picture),2P LR,2PTB, PIP,4P.There are signal channels for option in display mode.

Display Rotate supports 0°,90°,180°,270° image rotation.

Freeze can make image still.Press MENU button to enter menu first,then press

Left/Right button to choose Display. Then press Up/Down to choose specific item

and press Left/Right to adjust value.Menu button is back


When quad display, you can choose signal from VGA, DP, HDMI1, HDMI2,
 HDMI3, HDMI2.0, DVI for 1/2/3/4P




A. 1P

Shenzhen **Z**heng**Y**uanTai **T**echnology,Co,.Ltd.

1F,3F,5F,1st,Building,LeBao Industrial Park,FengXin Rd,Guangming New District,Shenzhen,China

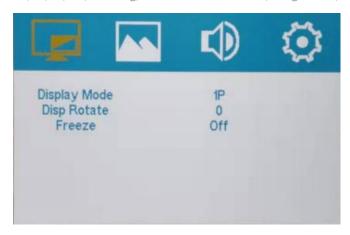


B. 2PLR(Left/Right)

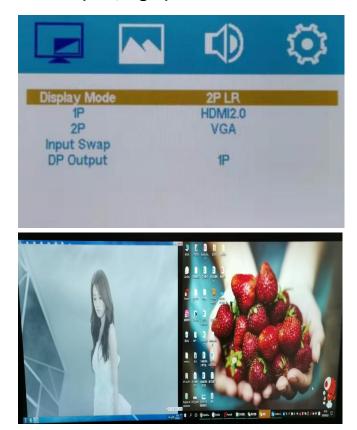

2L TB(Top/Bottom)

Shenzhen **Z**heng**Y**uanTai **T**echnology,Co,.Ltd.

1F,3F,5F,1st,Building,LeBao Industrial Park,FengXin Rd,Guangming New District,Shenzhen,China

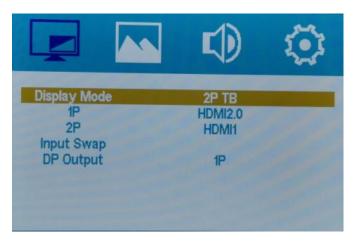




C. 2P PIP

PIP Size: 0-10, adjust the size of related display

PIP H Position: 0-100


PIP V Position: 0-100

The two items can adjust the station of involved picture

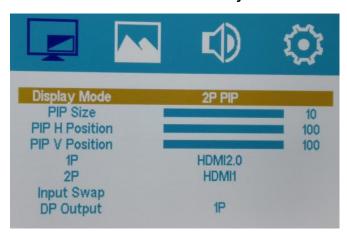

Shenzhen **Z**heng**Y**uanTai **T**echnology,Co,.Ltd.

1F,3F,5F,1st,Building,LeBao Industrial Park,FengXin Rd,Guangming New District,Shenzhen,China

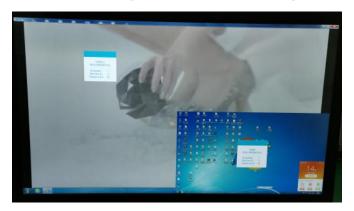

When PIP H Position value & PIP V Position value is 100, the involved picture is at the right down corner; when they all value is 0, then it is at the left up corner.

D. 4P






4) Picture

Shenzhen **Z**heng**Y**uanTai **T**echnology,Co,.Ltd.

1F,3F,5F,1st,Building,LeBao Industrial Park,FengXin Rd,Guangming New District,Shenzhen,China

Picture menu can set Brightness, Contrast, Sharpness, Hue, Saturation, Color Effect, Temperature, Aspect Ratio. Press MENU button to enter menu first, then press Left/Right button to choose Picture. Then press Up/Down to choose specific item and press Left/Right to adjust value. **Menu button is back**

- Brightness:0-100
- Contrast:0-100
- Sharpness:0-5
- Hue:0-100
- Saturation:0-100
- Color Effect:Standard,Game,Movie,Photo,Vivid.
- Temperature:6500,5800,SRGB,9300,7500.
- Aspect Ratio:Full,16:9,4:3,5:4,1:1

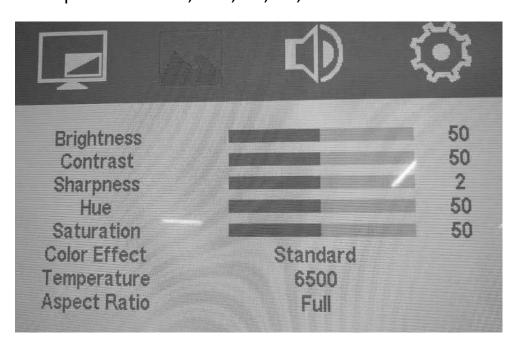


5) Volume

Shenzhen~ZhengYuanTai~Technology, Co,. Ltd.

1F,3F,5F,1st,Building,LeBao Industrial Park,FengXin Rd,Guangming New District,Shenzhen,China

Volume menu can set Volume, Mute, Audio Source. Press MENU button to enter menu first, then press Left/Right button to choose Volume. Then press Up/Down to choose specific item and press Left/Right to adjust value. **Menu button is back**

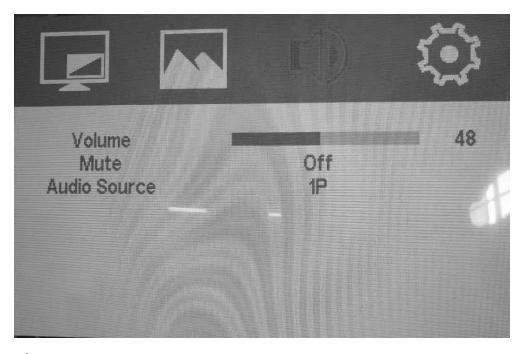

6) Setting

Setting menu can set Reset, Language, Menu Time, Transparency, Rotate, Fan
Setting, Active Temp Backlight. Press MENU button to enter menu first, then press
Left/Right button to choose Setting. Then press Up/Down to choose specific item
and press Left/Right to adjust value. **Menu button is back**

- Language:English,Chinese
- Menu time:0-100seconds
- Transparency:0-100
- Rotate:0°,90°,270° OSD rotation.

Shenzhen **Z**heng**Y**uanTai **T**echnology,Co,.Ltd.

1F,3F,5F,1st,Building,LeBao Industrial Park,FengXin Rd,Guangming New District,Shenzhen,China

- Fan Settings:Auto,On,Off
- Activate Temp:shows current temp
- Backlight:0-100

